


Anti-Seep Collars

Keep your pipe from being washed out.

- The Anti-Seep Collar works with any smoothwall pipe or Corrugated HDPE Drainage Pipe.
- 1/16" gum rubber.
- Easy to install.
- Tan floating stock has superior resilience, elongation, and tear strength.
- Resistant to water, most salts, mild acids, and many other chemicals.
- Wood frame.
- Economical to buy.



Size	Item#	Recommended Pipe Sizes
2' x 2'	ASC02	3"
3' x 3'	ASC03	4", 5", 6", 8", 10", 12"
4' x 4'	ASC04	15", 18", 24"
5' x 5'	ASC05	30", 36"
6' x 6'	ASC06	42", 48", 60"

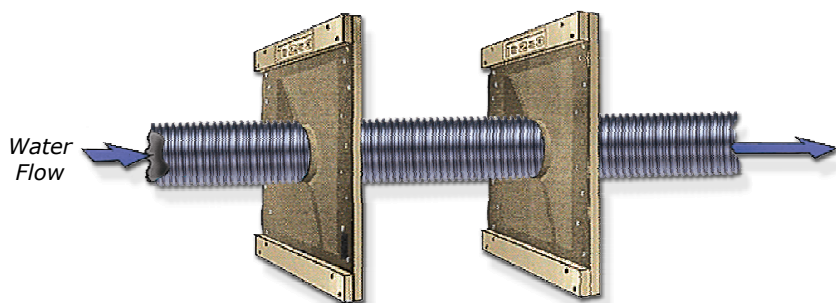

Gum Rubber

Physical Properties:

Tensile: 3000

Elongation: 600

Temperature: -20° F to +140° F

Finish: Smooth

Specifications:

ASTM D2000

SAE J200

1AA 430

Directions for Using The Anti-Seep Collar- *Instructions come with each collar.*

1. Unroll Anti-Seep Collar and align boards to form a square. Attach metal brackets to corner of the boards with screws provided. Attach rubber to frame with nails provided.
2. ***IMPORTANT—Cut a round hole** in the center of rubber that is smaller than pipe size (approx. 33% smaller). This will allow rubber to stretch over pipe when Anti-Seep Collar is installed on pipe. This will provide a tight seal between pipe and Anti-Seep Collar.
3. Slip pipe through Anti-Seep Collar, inspect seal between pipe and Anti-Seep Collar, carefully backfill, and compact with suitable soil.

***Cutting an "X" or slit will cause the rubber to tear.**

CAUTION: Excessive compaction or downward pressure on wooden frame will cause rubber to stretch and distort resulting in loss of seal between rubber and pipe.